



## Option 42 — Flow Data

To access the Flow Data menu in Display mode:

1. Press **D**.
2. Press **2** to invoke the Quick Jump option.
3. Press **42** for the **Flow Data** menu, and then press **E**.

---

```
TAG PRIMARY AIR
RT 2102.48 HRS
```

---

The prompt showing the meter name and total runtime appears.

4. Press **P** to continue.

---

```
FLOW RATE
2.685377 SCFM
```

---

The prompt for the current flow rate appears.

5. Press **P** to continue.

---

```
MSCF = 11.93814
ET 130260.8 MIN
```

---

The prompt showing the length of time for the current total flow rate appears. The “M” designation reflects millions ( $10^6$ ).

6. Press **P** to continue.

---

```
VELOCITY
2.392474 SFPM
```

---

The prompt showing the current velocity appears.

7. Press **P** to continue.

---

```
REF. DENSITY
0.073939 LB/CF
```

---

The Reference Density prompt reflects the value specified for the calibration data in Option 13.

8. Press **P** to continue.



---

```
FLOW AREA
0.785398 SQ. FT
```

---

The Flow Area prompt reflects the value specified in Option 1, Basic Setup.

9. Press **P** to continue.

---

```
CORRECTION
FACTOR 0.824180
```

---

The Correction Factor prompt for field correction appears.

10. Press **P** to continue.

---

```
IRP = 0.1558 A
AT 2.593611 SFPM
```

---

The prompt showing the power reading at current flow appears. This value is generally used only for zero flow calibration.

11. Press **P** to continue.

---

```
DRY      / WET SCFM
3.3      5.7
```

---

The prompt showing the dry and wet gas flow rate appears. This prompt only appears for WGF flow meters.

12. Press **H** to exit.

The main Display mode (DSP) prompt appears.