



Option 3 — Span Drift Check

To access the Span Drift Check menu in Extended Utilities mode:

1. Press **E**.
2. Enter your **Extended Utilities** access password, and then press **E**.
3. Press **2** to invoke the Quick Jump option.
4. Press **3** for the **Span Drift Check** menu, and then press **E**.

```
SPAN DRIFT CHECK
START TEST> YES
```

The Span Drift Check prompt appears.

5. Press the arrow keys to select **YES** or **NO**, and then press **E**.

```
SPAN DRIFT CHECK
IS RUNNING ...
```

The Span Drift Check starts.

```
SPAN DRIFT CHECK
% DIFF = 0.008
```

The prompt showing the percentage difference appears.

```
Vin= 2.97000 V
Vout= 2.97014 V
```

The prompt showing the voltage appears.

6. Press **E** to return to the Util Mode Option prompt.