



Option 5 — Flow Totalizer Reset

To access the Flow Totalizer Reset menu in Extended Utilities mode:

1. Press **E**.
2. Enter your **Extended Utilities** access password, and then press **E**.
3. Press **2** to invoke the Quick Jump option.
4. Press **5** for the **Flow Totalizer Reset** menu, and then press **E**.

```
RESET FLOW TOTAL  
> YES
```

The Reset Flow Total prompt appears.

5. Press the arrow keys to switch from **YES** or **NO**, and then press **E**.

```
RESETTING FLOW  
TOTALIZER
```

The prompt indicates the flow totalizer is resetting.

```
TOTALIZER IS  
RESET ...
```

The prompt indicates the reset is complete.

6. Press **E** to return to the Util Mode Option prompt.